

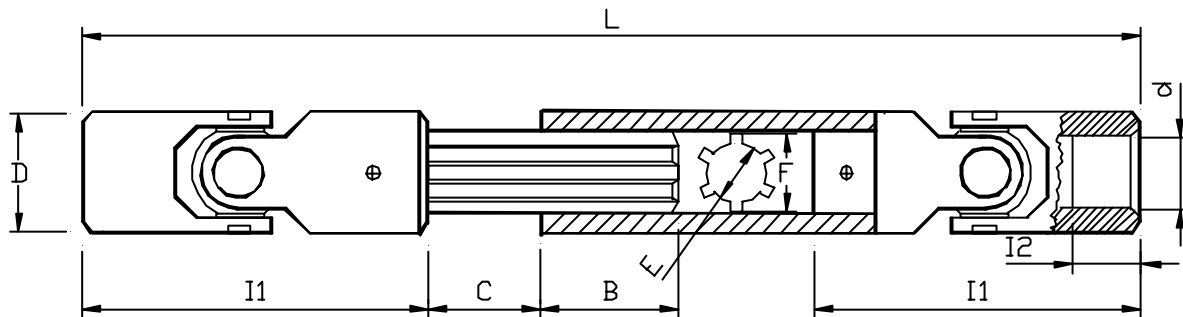


Juntas de precisión simples, dobles y telescópicas

TIPO	d	D	I1	I2	B	E	F	S	SW	L min.
125A	10	22	45	10	40	11	14	10	10	130
126A	12	26	50	11	45	13	16	12	12	140
127A	14	29	56	13	48	13	16	14	14	160
128A	16	32	65	15	50	16	20	16	16	180
129A	18	37	72	17	51	16	20	17	18	195
130A	20	40	82	19	56	18	22	20	20	220
131A	22	47	95	22	60	21	25	22	22	250
132A	25	50	108	27	69	23	28	25	25	270
133A	30	58	122	30	70	26	32	30	35	320
134A	35	70	140	35	70	32	38	36	35	-
135A	40	80	160	42	70	42	48	41	35	-
136A	50	95	190	54	70	42	48	50	35	-

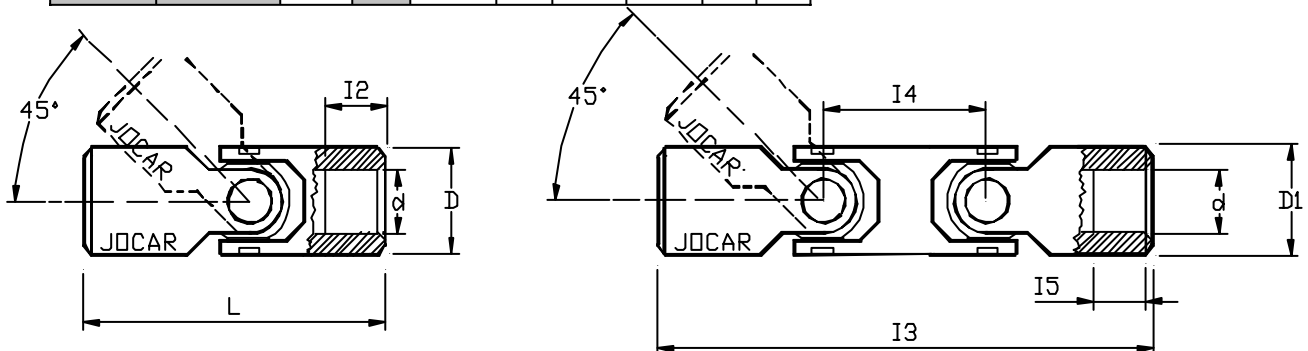

Simple	Doble	d	D	L	I2	I3	I5	S	S W
101A	--	6	16	34	9	--	--	--	--
102A	--	8	16	40	11	--	--	--	--
103A	--	10	22	45	10	--	--	10	10
104A	104AD	12	26	50	11	74	15	12	12
105A	105AD	14	29	56	13	85	16	14	14
106A	106AD	16	32	65	15	100	19	16	16
107A	107AD	18	37	72	17	112	20	17	18
108A	108AD	20	40	82	19	127	20	20	20
109A	109AD	22	47	95	22	145	25	22	--
110A	110AD	25	50	108	27	163	25	25	25
111A	111AD	30	58	122	30	182	30	30	35
111/1A	111/1AD	32	58	130	30	198	30	30	35
112A	112AD	35	70	140	35	212	30	--	35
113A	113AD	40	80	160	42	245	38	--	35
114A	114AD	50	95	190	54	290	50	--	35

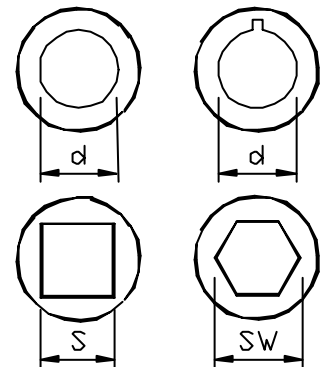

JOCAR TRANSMISIONES S.L.

c/Lezeaga, 4 48002 Bilbao

Tif 94 427 53 40 Fax 94 427 54 93

www.jocartransmisiones.com

e-mail: jocar@jocartransmisiones.com